



# User Manual

Spend a little Live a lot

GUIDE



## TABLE SAW WZTS 1702



### Product Info



[www.aldi.co.uk](http://www.aldi.co.uk)

**+ VIDEO**

Original instructions

# QR codes take you where you want to go quickly and easily

Whether you require **product information**, **spare parts** or **accessories**, details on **warranties** or **aftersales services**, or if you want to watch a **product demonstration video**, our QR codes will take you there in no time at all.

## What is a QR code?

A QR code (QR = Quick Response) is a type of matrix that can be read with a smartphone camera and that contains a link to a website or contact details, for example.

**Advantage:** You do not need to manually enter a website address or contact details.

## This is how it works

To scan the QR code, all you need is a smartphone with QR code reader software and an internet connection\*. This type of software can be downloaded for free from your app store.

## Try it out now

Just scan the QR code with your smartphone and find out more about the Aldi product you have purchased.\*

## Your Aldi Service Portal

All details mentioned above can also be found in the Aldi Service Portal at [www.aldi.co.uk](http://www.aldi.co.uk).





\* Depending on your tariff plan you may be charged for the connection.


# Contents

<b>Overview .....</b>	<b>4</b>
<b>Use.....</b>	<b>5</b>
<b>Product contents/device parts.....</b>	<b>6</b>
<b>General information.....</b>	<b>7</b>
Reading and storing the original instruction manual.....	7
Explanation of symbols .....	7
<b>Safety .....</b>	<b>8</b>
Proper use.....	8
Safety notes .....	9
<b>First use.....</b>	<b>19</b>
Checking the table saw and product contents.....	19
Assembly .....	19
<b>Operation.....</b>	<b>26</b>
Preparations .....	26
Turning the saw on and off .....	29
Cutting depth .....	29
Setting the angle .....	29
Parallel guide .....	29
Cross guide .....	31
The laser .....	33
Sawing.....	34
<b>Cleaning .....</b>	<b>36</b>
<b>Troubleshooting.....</b>	<b>37</b>
<b>Technical data .....</b>	<b>38</b>
<b>Ordering spare parts.....</b>	<b>40</b>
<b>Declaration of conformity .....</b>	<b>41</b>
<b>Disposal.....</b>	<b>42</b>
<b>Warranty Card.....</b>	<b>43</b>
<b>Warranty conditions.....</b>	<b>44</b>


A

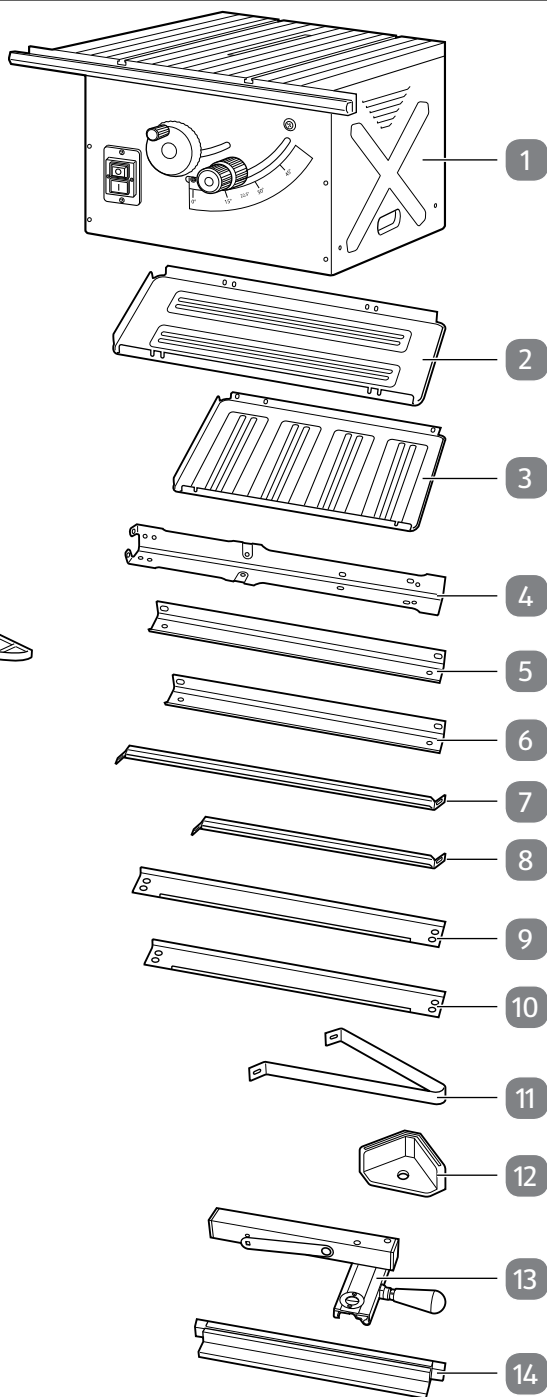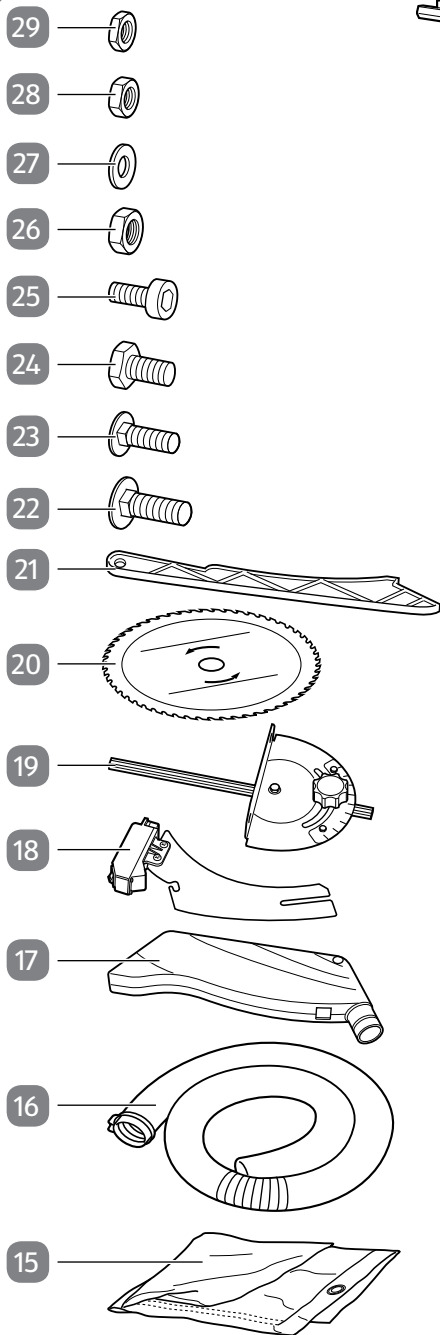

B

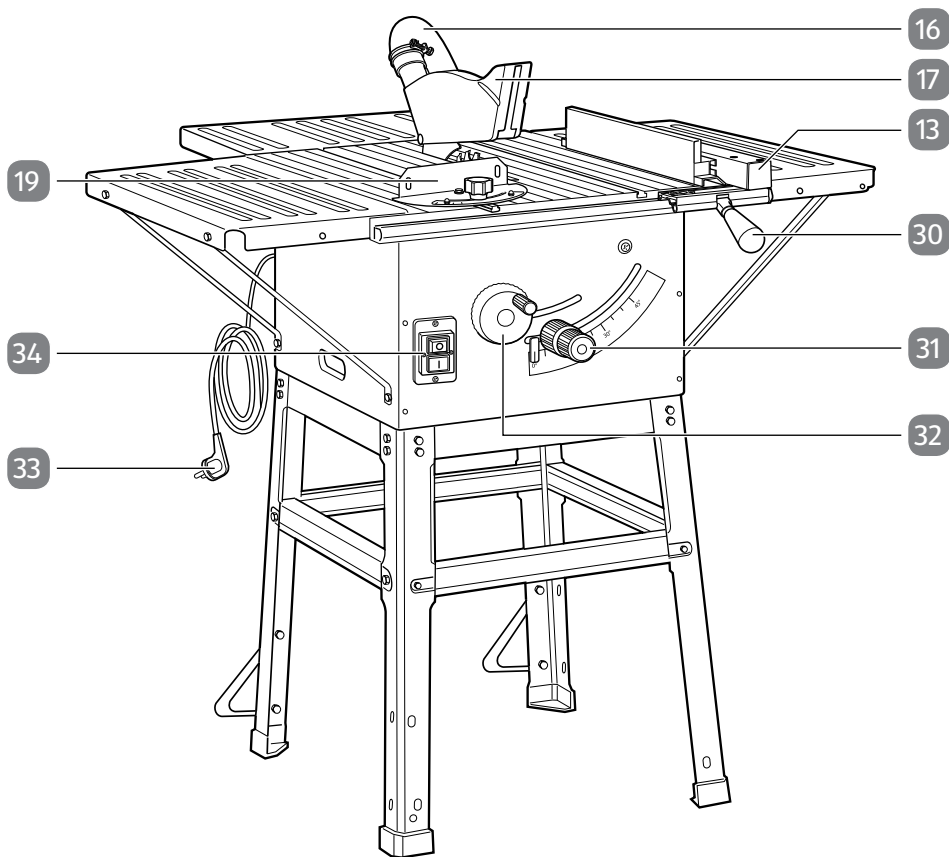

C

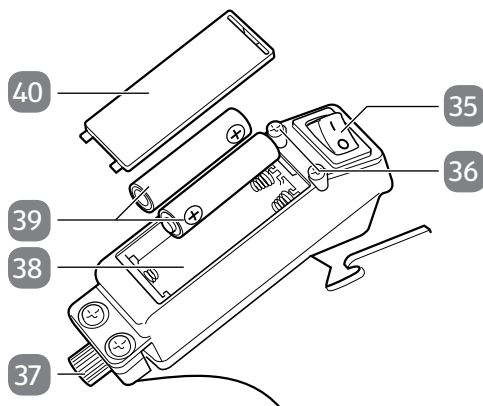

# Product contents/device parts

- |    |                            |    |                                 |
|----|----------------------------|----|---------------------------------|
| 1  | Saw table                  | 21 | Push stick                      |
| 2  | Table width extension (2x) | 22 | Carriage screw M6 x 20 (2x)     |
| 3  | Table length extension     | 23 | Carriage screw M6 x 16 (4x)     |
| 4  | Support leg (4x)           | 24 | Hexagon screw M6 x 12 (52x)     |
| 5  | Centre brace 47 cm (2x)    | 25 | Allen head screw M5 x 10 (6x)   |
| 6  | Centre brace 44 cm (2x)    | 26 | M6 nut (38x)                    |
| 7  | Table support 48 cm (2x)   | 27 | 6 mm washer (52x)               |
| 8  | Table support 36.5 cm (4x) | 28 | M5 nut x 4 (4x)                 |
| 9  | Upper brace 43 cm (2x)     | 29 | M5 nut x 2.8 (4x)               |
| 10 | Upper brace 40.5 cm (2x)   | 30 | Eccentric lever                 |
| 11 | Upright bracket (2x)       | 31 | Adjusting and locking handle    |
| 12 | Rubber feet                | 32 | Handwheel                       |
| 13 | Parallel guide             | 33 | Mains cord including mains plug |
| 14 | Stop rail                  | 34 | Power switch                    |
| 15 | Waste bag                  | 35 | Laser switch                    |
| 16 | Suction hose               | 36 | Battery compartment screws      |
| 17 | Saw blade guard            | 37 | Laser                           |
| 18 | Splitting wedge with laser | 38 | Battery compartment             |
| 19 | Cross guide                | 39 | Batteries                       |
| 20 | Saw blade (48 teeth)       | 40 | Battery compartment cover       |

# General information

## Reading and storing the original instruction manual



This instruction manual accompanies this table saw. It contains important information on start-up and handling.

For improved readability, the “original instruction manual” will be referred to only as the “instruction manual”.

Before using the table saw, read the instruction manual carefully. This particularly applies for the safety notes. Failure to heed this instruction manual may result in severe injury or damage to the table saw.

The instruction manual is based on the standards and rules in force in the European Union. When abroad, you must also observe country-specific guidelines and laws.

Store the instruction manual for future use. If you pass the table saw on to third parties, please be absolutely sure to include this instruction manual.

## Explanation of symbols

The following symbols and signal words are used in this instruction manual, on the table saw or on the packaging.



This signal symbol/word indicates a hazard with high risk that, if not avoided, results in death or a severe injury.



This signal symbol/word designates a hazard with moderate degree of risk which may lead to death or severe injury if not avoided.



This signal symbol/word designates a hazard with low risk that, if not avoided, may result in minor or moderate injury.



This signal symbol/word warns against potential damages to property.



This symbol provides you with useful supplementary information on assembly or operation.



Declaration of conformity (see chapter “Declaration of conformity”):  
Products marked with this symbol meet all applicable Community regulations for the European Economic Area.



**Caution: Laser beam!**

Do not look into the laser beam!



**Attention!**

Risk of injury due to sharp edges!



Wear protective goggles!



Wear ear protection!



Wear respiratory protection!

## Safety

### Proper use

The table saw is only for cutting woods of all kinds lengthwise and crosswise (only with the cross guide) in accordance with the size of the machine. Round lumber, regardless of the kind, may not be cut. Only saw blades suitable for the machine (HM or CV saw blades) may be used. The use of HSS saw blades and cutting discs of any kind is prohibited. The table saw is only intended for private use and not suitable for commercial purposes.

Only use the table saw as described in this instruction manual. Any other use is deemed improper and may result in damage to property or even personal injury. The table saw is not a children's toy.

The manufacturer or vendor accepts no liability for damage caused by improper or incorrect use.



## Safety notes

### General safety notes for power tools

#### **WARNING!**

#### **Read all safety notes and instructions.**

Failure to follow the safety notes and instructions may result in an electric shock, fire and/or severe injury.

#### **Keep all safety notes and instructions for future reference.**

The term “power tool” used in the safety notes refers to mains-operated power tools (with a mains cord) and battery-powered power tools (cordless).

### **1. Work place safety**

- a) **Keep your work area clean and well lit.** Disorganisation or unlit work areas may result in accidents.
- b) **Do not work with the power tool in areas with a risk of explosion where flammable liquids, gases or dusts are present.** Power tools may produce sparks that could ignite dust or vapours.
- c) **Keep children and other persons away from the power tool while you are using it.** If you are distracted, you could lose control of the device.

### **2. Electrical safety**

- a) **The connector plug for the power tool must fit in the socket. The plug may not be modified in any way. Do not use any adapter plugs in combination with power tools with protective earthing.** Plugs that have not been modified and sockets with the proper fit reduce the risk of an electric shock.
- b) **Avoid coming into contact with earthed surfaces like pipes, heaters, stoves and refrigerators.** There is an increased risk of electric shock if your body is grounded.
- c) **Keep power tools away from rain or moisture.** If water penetrates a power tool, there is an increased risk of electric shock.

- d) **Do not use the cord for purposes other than the intended one such as for carrying the power tool, hanging it up or pulling the plug out of the socket. Keep the cord away from heat, oil, sharp edges or moving parts of the device.** A damaged or wound up cable increases the risk of an electric shock.
- e) **If you are working with a power tool outdoors, only use extension cords that are also suitable for outdoor use.** The use of an extension cord suitable for outdoor application reduces the risk of electrical shock.
- f) **If operating the power tool outdoors cannot be avoided, use a fault-current circuit breaker.** Using a fault-current circuit breaker reduces the risk of an electric shock.
- g) **Do not operate the power tool in a wet or damp environment. Never expose it to rain.** Working in a wet and damp environment increases the risk of electric shock and generally increases the risk of injury.

### 3. Safety of persons

- a) **Be careful, pay attention to what you are doing and approach work with a power tool in a reasonable manner. Do not use any power tool if you are tired or under the influence of drugs, alcohol or medication.** A single moment of inattentiveness when using the power tool can result in serious injury.
- b) **Wear personal protective gear and always wear protective goggles.** Depending on the type of power tool and how it is used, wearing personal protective gear such as a dust mask, non-slip safety shoes, a protective helmet or ear protection reduces the risk of injury. If you have long hair, wear a hair net. Use a breathing mask if performing dusty work.
- c) **Avoid accidentally activating the device. Make sure that the power tool is turned off before you connect it to the power supply, connect the rechargeable battery, pick it up or carry it.** If you have your finger on the switch when carrying the power tool or connect the device to the power supply when it is turned on, this may cause an accident.

- d) **Remove all adjusting tools or spanners before you switch the power tool on.** A tool or spanner in contact with a rotating part of the device may result in injury.
- e) **Avoid an abnormal posture. Maintain a safe stand and keep your balance at all times.** This will allow you to have better control of the power tool in the event of unexpected situations.
- f) **Wear suitable clothing. Do not wear any loose-fitting clothing or jewellery. Keep your hair, clothing and gloves away from the moving parts.** Loose clothing, jewellery or long hair may get caught in the moving parts. It is recommended that you wear firm gloves, non-slip shoes and protective goggles.
- g) **If you can attach dust extractors and dust collectors, make sure that they are connected and used properly.** Using a dust extractor may reduce risks associated with dust.

#### 4. Using and handling the power tool

- a) **Do not overload the device. Use the right power tool for your work.** The right power tool will ensure that you work more effectively and safely within the specified power range.
- b) **Do not use a power tool if its switch is defective.** A power tool that can no longer be switched on or off is dangerous and must be repaired.
- c) **Pull the plug out of the socket and/or remove the rechargeable battery before you make any adjustments to the device, change the accessories or put away the device.** This precaution will prevent the power tool from accidentally starting.
- d) **Keep unused power tools out of the reach of children. Do not let persons use the device who are not familiar with the device or have not read these instructions.** Power tools are dangerous if used by inexperienced persons.
- e) **Take good care of the power tools. Check to make sure that the moving parts are functioning properly and not stuck, whether parts are broken or damaged so as to affect the function of the power tool. Have damaged parts repaired before you use the device.** A large number of accidents are caused by poorly maintained power tools.

- f) **Keep your cutting tools sharp and clean.** Well maintained cutting tools with sharp cutting edges are less likely to catch and are easier to guide.
- g) **Use the right tool.** Do not use any tools or attachments that are not powerful enough for heavy duty work. Do not use the tools for purposes and tasks which they are not intended for; for example, do not use a circular hand saw to fell trees or cut off branches.
- h) **Use the power tool, accessories, insertion tools etc. in accordance with these instructions. At the same time, consider the working conditions and the work to be performed.** Using power tools for applications other than the intended ones may result in dangerous situations.

## 5. Service

- a) **Only have your power tool repaired by a qualified professional and only with original spare parts.** This will ensure that the safety of the power tool is not compromised.

### **WARNING!**

**Danger for children and persons with impaired physical, sensory or mental capacities (e.g. partially disabled persons, older persons with reduced physical and mental capacities) or lack of experience and knowledge (e.g. older children).**

- The table saw may not be used by children and persons with impaired physical, sensory or mental capacities or lack of experience and knowledge.
- The operator must be at least 18 years of age; trainees who are at least 16 years of age may only operate the device if they are supervised.
- Children may not play with the table saw. Cleaning and user maintenance must not be performed by children.
- Do not allow children to play with the packaging wrapper. They may get caught in it when playing and suffocate.
- Make sure that children do not insert any objects in the table saw.

**⚠ WARNING!****Risk of electric shock!**

A faulty electrical installation or excessive mains voltage may result in an electric shock.

- Only connect the table saw if the mains voltage of the socket corresponds to the specification on the nameplate.
- Do not kink the mains cord and do not lay it over sharp edges.
- Only connect the table saw to an easily accessible socket so that you can quickly disconnect the table saw from the power supply in the event of a fault.
- If an extension cord is required, make sure its diameter is sufficient to accommodate the power consumption of the saw. Minimum diameter 1 mm<sup>2</sup>.
- Only use cable drums if the cable is completely rolled out.
- Check the mains connection line. Do not use any faulty or damaged connection lines.
- The table saw is equipped with a safety switch to protect it against reactivation after a voltage drop.
- Never operate the table saw in wet rooms or in the rain.
- If the mains connection line of this device is damaged, it must be replaced by the manufacturer, its customer service department or a similarly qualified person in order to prevent risks.
- Do not open the housing; instead, have a qualified professional perform the repairs. Contact a qualified workshop for this. Liability and warranty claims are waived in the event of repairs performed by the user, improper connection of the device or incorrect operation.

**⚠ WARNING!****Risks associated with using the table saw**

If used improperly or in a negligent manner, the table saw can inflict serious injury!

- Carefully read through the instructions on proper handling, preparatory steps, maintenance, starting and switching off the table saw. Familiarise yourself with all controls and switches as well as proper use of the table saw.
- The rotating saw blade poses a risk of injury for your hands and fingers. Pay attention to the direction of rotation of the motor and saw blade.
- Set up the table saw in a stable position.
- Prevent accidental start-up. Ensure that the power switch is off when connecting to the power supply.
- Safety devices on the machine may not be removed or dismantled.
- Check to make sure that moving parts are functional, that they are not jammed and that the parts are not damaged. All parts must be properly mounted to guarantee the safety of the device.
- Damaged protective devices and parts must be professionally repaired or replaced by a customer service workshop to the extent not otherwise specified in the instruction manuals.
- You must replace a worn or damaged insert. Pull the mains plug before doing so.
- Damaged switches must be replaced by a customer service workshop. Do not use any tools if the power switch cannot be turned on and off.
- Defects in the machine, including defects affecting protective devices and the saw blade, must be reported to the person responsible for safety as soon as they are identified.
- For your own safety, only use accessories and auxiliary equipment specified in the instruction manual or recommended or specified by the tool manufacturer. Using tools or accessories other than those recommended in the instruction manual or catalogue may put you at risk of personal injury.

- The following factors may influence the effect of noise on the operator:
  - Type of saw blade (e.g. saw blades that reduce the effect of noise)
  - Workpiece material
  - The force with which the workpiece is pushed against the saw blade.

## Safe operation

- The safety, working and maintenance notes of the manufacturer as well as the dimensions specified in the technical data must be complied with.
- Applicable accident prevention regulations and other generally recognised safety rules must be complied with.
- Observe all specification booklets provided by the professional association.
- The operator must be informed about factors affecting the release of dust, e.g. the type of workpiece being cut (classification and source), the importance of local deposit and the correct configuration of hoods / baffles / guides.
- Connect the dust extractor every time you perform any work. Only operate the saw with a suitable dust collector or commercially-available shop vacuum. Recommended suction power of the dust collector: 20 m/s
- Before start-up, all covers and safety devices must be properly mounted.
- The splitting wedge is an important protective device that guides the workpiece and prevents the kerf from closing behind the saw blade and the workpiece from kicking back. Take note of the thickness of the splitting wedge. The splitting wedge may not be thinner than the body of the saw blade and no thicker than the width of the kerf.
- Insert the splitting wedge properly and never operate the table saw without the splitting wedge.
- You must lower the protective hood onto the workpiece for every work step.

- Set the protective hood correctly and never operate the table saw without the protective hood.
- Always position yourself to the side of the saw blade when working.
- Guide the workpiece properly.
- Always use the push stick or a push block to safely push the workpiece by the saw blade.
- Always store the push stick or the handle for a push block on the machine when not in use.
- When cutting pre-processed wood, look out for debris like nails or screws etc.
- Never stress the table saw so that it comes to a stop.
- Always push the workpiece firmly against the worktop.
- Make sure that the pieces of wood cut are not caught by the teeth of the saw blade and projected.
- Never remove loose splinters, chips or clamped-in wood parts while the saw blade is running.
- To rectify faults or to remove pieces of wood that are caught, switch the machine off and pull the mains plug.
- Do not cut any workpieces that are too small to be safely held in your hand.
- Do not use the table saw to cut firewood.
- Do not cross cut round lumber.
- Do not cut rebates or grooves without fitting a suitable protective device, e.g. a tunnel-type device, over the saw table.
- Do not use the circular saw to cut slots (a groove ending in the workpiece).
- It is not permissible to make plunge cuts with this table saw.
- When cutting narrow pieces of wood to size, the parallel guide on the right side of the saw blade must be clamped in place.
- Secure long workpieces against falling off at the end of the cut (e.g. with a roller stand).



- Do not in any case push against the side of the saw blade to stop it after switching off the motor.
- Observe the notes for lubricating and changing tools.
- All protective and safety devices must be immediately re-mounted once repairs or maintenance are complete.
- Only use the transport fixtures to transport the machine; never use the protective fixtures for handling or transport. The handle openings for transport are located on both sides of the saw housing.
- During transport, cover the top part of the saw blade, for example, with the protective hood.

### **Safety notes for handling saw blades**

- Keep your saw blades sharp and clean. Well maintained cutting tools with sharp cutting edges are less likely to catch and are easier to guide.
- Do not use deformed or cracked saw blades. It is not permissible to repair them. Worn, damaged or cracked saw blades may increase the release of dust.
- Do not use any saw blades that do not meet the characteristic data specified in the instruction manual.
- These saw blades are not suitable for resharpening!
- Only use saw blades recommended by the manufacturer that correspond to EN 847-1. When changing the saw blade, make sure that the cutting width is not less and the thickness of the steel blade is no greater than the thickness of the splitting wedge.
- Only use saw blades whose maximum permissible speed is not less than the maximum spindle speed of the table saw.
- Only saw blades that are suitable for the table saw (HM or CV saw blades) may be used for the table saw. The use of HSS saw blades and cutting discs of any kind is prohibited.
- Select a saw blade that is suitable for the material you intend to cut.

- Wear gloves when handling saw blades and rough materials. Whenever convenient, you must carry the saw blade in a container.
- Make sure that all fixtures covering the saw blade are functioning properly.
- The saw blade must be able to rotate unimpaired.
- It is not permitted to use loose reducing rings or bushings to reduce bore holes in circular saw blades. It is permissible to use fitted rings, e.g. pressed into circular saw blades or held in place by means of an adhesive bond or flanged bushings with other tools, if they are manufactured in accordance with the manufacturer's stipulations.
- Due to production tolerances, the reducing rings may have to be fitted in the bore hole on the saw blade with a rubber mallet. For this, place the area around the bore hole on the saw blade on a solid base (e.g. wood); the teeth must be unobstructed when striking to prevent the saw blade from being bent.
- Replace the reducing ring with a new one (available in a professional outlet) if it is no longer able to hold itself in the saw blade.
- Tools and tool bodies must be clamped in place to prevent them from coming loose during operation.
- When mounting the tools, it must be ensured that they are clamped in place on the tool collar or the clamping surface of the tool and that the blades do not come into contact with one another or the clamping elements.
- Fixing screws and nuts must be tightened with the corresponding wrenches etc. and the torque as specified by the manufacturer.
- It is not permitted to use striking tools or extensions for the wrench when tightening.
- The clamping surfaces must be free of dirt, oil and water!

## Residual risks:

Despite being used properly, certain residual risk factors cannot be completely ruled out. The following risks associated with the design and construction of the machine may apply:

- Contact with the part of the saw blade that is not covered
- Reaching into the rotating saw blade (cut injury)
- Kickback of workpieces and parts of workpieces
- Saw blade breaks
- Projection of defective hard metal parts of the saw blade
- Hearing loss in the event of failure to use the required ear protection
- Emission of wood dust that is harmful to health if used in enclosed spaces

## First use

### Checking the table saw and product contents

1. Carefully take the table saw out of the packaging.
2. Check to make sure that the delivery is complete (see **fig. A**).
3. Check whether the table saw or the accessories exhibit damage.
4. In the event of damages or missing parts, do not use the table saw. Contact the manufacturer via the service address indicated on the warranty card.

## Assembly

### **WARNING!**




Before start-up, assemble the table saw properly and completely, including all covers and safety devices.

- Only once you have completed assembly, may you insert the mains plug in the socket.

You will need the following tools for assembly:

- two AF 10 ring spanners
- one ring and one AF 8 open-ended spanner
- one 4 mm Allen wrench
- PH2 star-headed screwdriver

### AFTER SALES SUPPORT




  0044 151 649 1500  
 0044 1890 946 244

 [sales@einhell.co.uk](mailto:sales@einhell.co.uk)

## Assembling the underframe


1. Turn the saw table **1** over and place it on the floor.
2. Screw the four support legs **4** loosely onto the bottom of the saw table using two hexagon screws **24** and washers **27** each.
3. Attach one rubber foot **12** to each of the support legs.
4. Screw the centre braces **5** and **6** loosely onto the support legs using two hexagon screws **24**, two washers **27** and two nuts **26** each. Mount the longer ones lengthwise and the shorter ones cross-wise.
5. Screw the centre braces together using four hexagon screws **24**, four washers **27** and four nuts **26**.
6. Screw the top braces **9** and **10** loosely onto the support legs with four hexagon screws **24**, four washers **27** and four nuts **26** each. Mount the longer ones lengthwise and the shorter ones cross-wise.
7. Now tighten all screws for assembly steps 2 to 6 in this order.
8. Screw the two upright brackets **11** on the back support legs tight with two hexagon screws **24**, washers **27** and nuts **26** each.

The upright brackets will prevent the table saw from tipping back if too much pressure is applied to the saw.

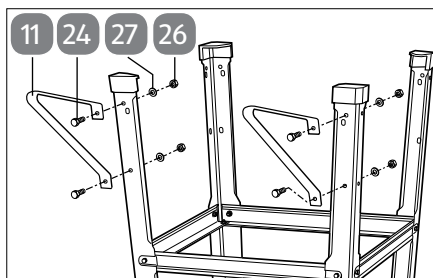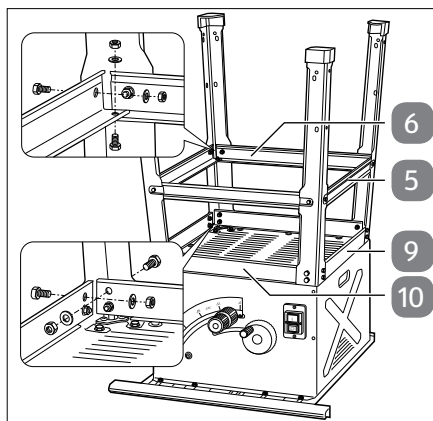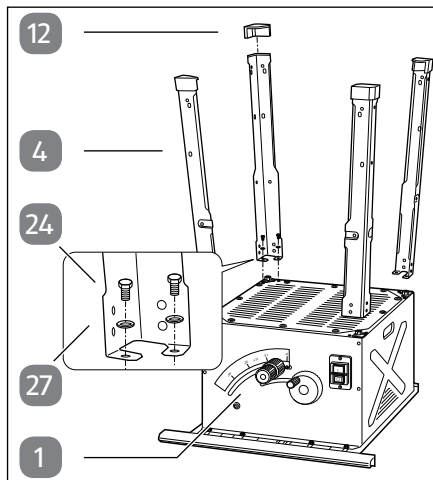

## Mounting the table extensions


1. Screw the table width extensions **2** and table length extension **3** loosely onto the saw table **1** with two Allen head screws **25** and washers **27** each.

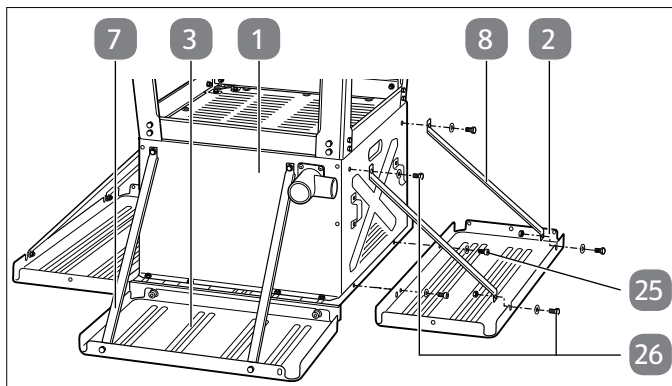

2. Screw the 36.5 cm table supports **8** loosely onto the sides of the saw table using two hexagon screws **24** and washers **27** each.
3. Screw the other end of the table supports loosely onto the table width extensions **2** using two hexagon screws **24**, washers **27** and nuts **26**.
4. Screw the 48 cm table supports **7** loosely onto the back end of the saw table using two hexagon screws **24** and washers **27** each.
5. Screw the other end of the table supports loosely onto the table length extension **3** using two hexagon screws **24**, washers **27** and nuts **26** each.
6. Align the table width and length extensions so that they are level with the saw table and tighten all screws.
7. Carefully turn the table saw over and set it upright with its legs on the ground.

## Mounting the parallel guide

1. Hold the eccentric lever **30** up and set the parallel guide **13** on the rail **42**.

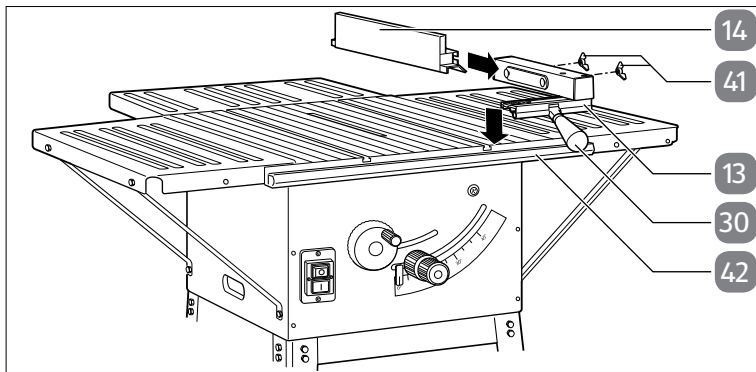

2. Loosen the wing nuts **41** by turning them a few revolutions and push the stop rail **14** onto the parallel guide so that the metal plate glides into the profile of the stop rail.
3. Tighten the wing nuts again.

For removal, lift the front of the parallel guide slightly with the eccentric lever **30** and reach under the stop rail with your other hand.

## Mounting/adjusting the splitting wedge

### ⚠ WARNING!


### Risk of injury!

The saw blade is very sharp – even soft touches may result in injury.


- Wear protective gloves during the following steps.
- If necessary, pull the mains plug out of the socket.

You must check and, if applicable, adjust the splitting wedge every time after changing the saw blade.

1. Remove the two screws **43** and take the insert **44** out.  
Always check the insert in the process: Replace it if it is damaged or if it is no longer flush with the table.

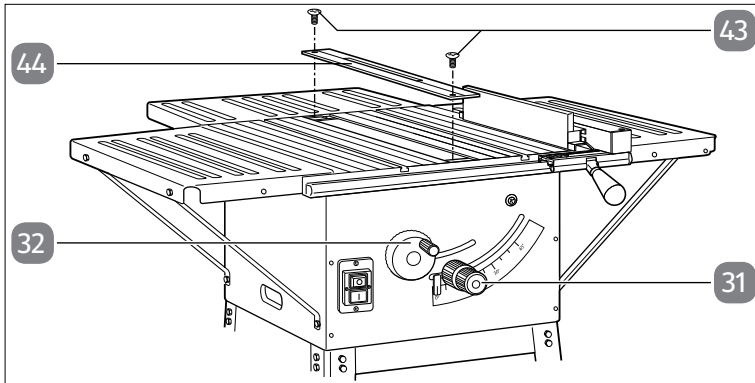

2. If applicable, set the angle to "0". For this, loosen the front part of the adjusting and locking handle **31** by turning it approx. one revolution counterclockwise; set the angle to "0" with the back part and tighten the front part again.
3. Set the maximum cutting depth: To do so, turn the handwheel **32** counterclockwise up to the stop point. Caution: The saw blade will extend out of the table in the process.
4. Use an AF 10 spanner to loosen the clamp screw **45** to the right of the saw blade a few revolutions and insert the splitting wedge behind the clamping plate facing down up to the stop point.

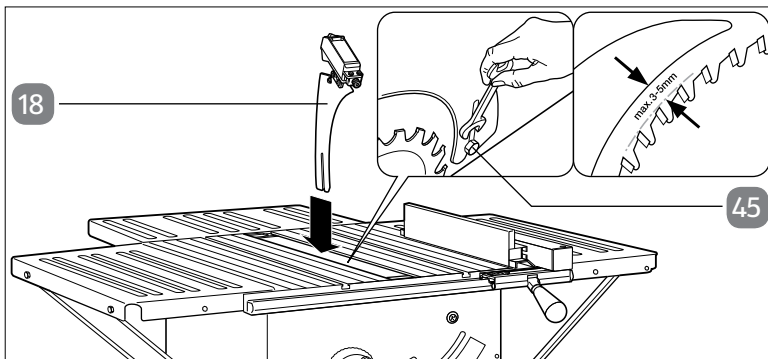

5. Tighten the clamp screw slightly and align the splitting wedge so that there is 3 and 5 mm of space to the saw blade on all sides.
6. Tighten the clamp screw.
7. Put the insert back in: First insert it on the side facing away from the saw blade in the groove and then fold it down. It must be flush with the table.
8. Insert the two screws **43** again and tighten them.

## Mounting the protective hood and suction hose


### **⚠ WARNING!**

### **Risk of injury!**

The protective hood prevents chips and dust from being projected towards your face when sawing.

– Never saw without the protective hood.

1. Carefully place the protective hood **17** over the laser and on the splitting wedge **18**, so that the screw fits into the elongated hole on the rear end of the splitting wedge.

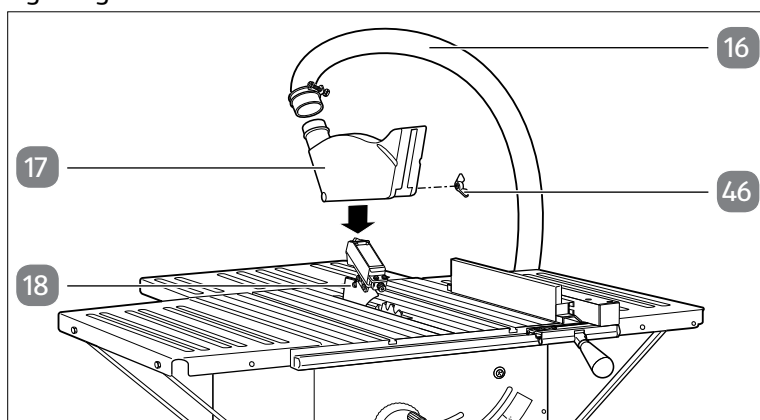


2. Push the protective hood back up to the stop point and do not tighten the wing nut **46** excessively – it must be possible to move the protective hood up and down.  
The wing nut must always be on the right side. Otherwise, you will encounter problems when performing bevel cuts. Therefore, do not turn the carriage bolt in the protective hood over.
3. Stick the end of the suction hose **16** with the hose clamp on the suction nozzle of the protective hood and do not excessively tighten the clamp.
4. Stick the other end of the suction hose on the side port of the suction adapter on the back of the table saw.
5. Connect a suitable shaving extractor (e.g. a multi-purpose vacuum cleaner) to the connection of the suction adapter on the back. A normal household vacuum cleaner is not suitable.



## Mounting the waste bag

The waste bag is hooked onto the back left of the saw table and serves to collect smaller cutting rests.

1. Screw a nut **29** onto each of the four carriage bolts **23**.
2. From the inside, insert the four screws through the holes at the back on the left table width extension **2** and on the left side of the table length extension **3** and screw one nut **28** on each from the outside.
3. Use an AF 8 ring and open-ended spanner to tighten the nuts.
4. Hook the waste bag **15** onto the carriage bolts from the inside.

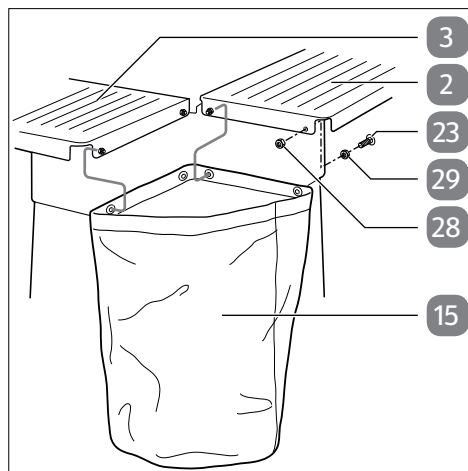

You should now have two carriage bolts **22** left. Store them well; they are needed to mount the stop rail **14** on the cross guide **19**.

You have now successfully completed initial assembly.

# Operation

## Preparations

### Changing the saw blade

#### **⚠ WARNING!**


#### **Risk of injury!**

The saw blade is very sharp – even soft touches may result in injury.


- Wear protective gloves during the following steps.
- Pull the mains plug out of the socket.

1. Remove the two screws **43** and take the insert **44** out.

Always check the insert in the process: You must replace it if it is damaged or no longer flush with the table.

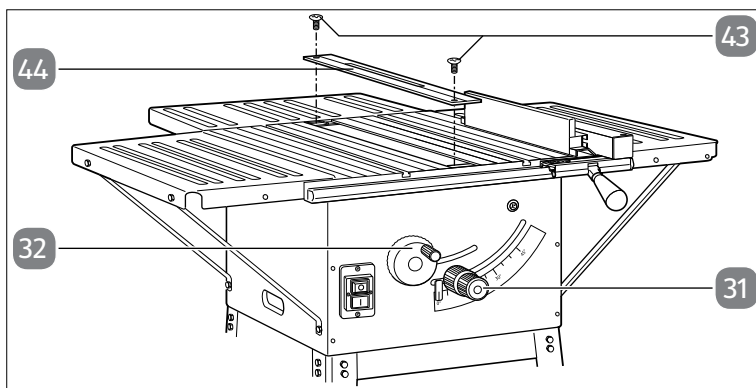

2. If applicable, set the angle to "0". For this, loosen the front part of the adjusting and locking handle **31** by turning it approx. one revolution counterclockwise; set the angle to "0" with the back part and tighten the front part again.
3. Set the maximum cutting depth: To do so, turn the handwheel **32** counterclockwise up to the stop point. Caution: The saw blade **20** will extend out of the table in the process.
4. Fold the protective hood all the way up.

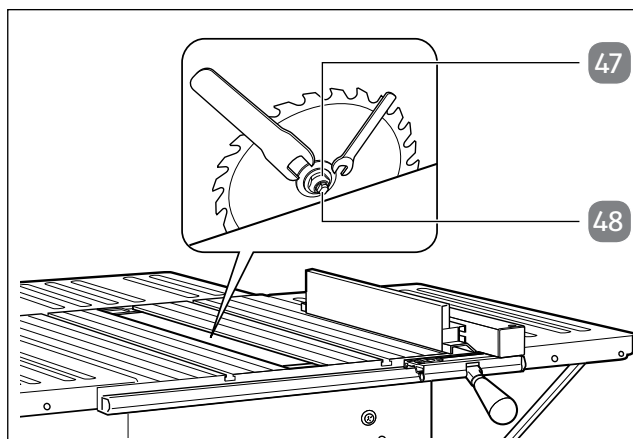


5. Fit a AF 24 ring or open-ended spanner on the fastening nut **47** and an AF 10 open-ended spanner on the drive shaft **48**.
6. Loosen the fastening nut by turning it counterclockwise while holding the drive shaft tight with the second open-ended spanner.
7. Take the fastening nut and the pressure disc off of the drive shaft.
8. Carefully remove the saw blade from the drive shaft flange diagonally in a downward direction.
9. Clean the drive shaft flange, the fastening nut and pressure disc thoroughly.
10. Place the new saw blade on the drive shaft flange. In the process, observe the direction of rotation: the cutting edge of the blade teeth must point in the direction of rotation (forward, see the arrow on the protective hood). Usually, the direction of rotation is indicated on the saw blade.
11. Put the pressure disc back on and screw on the fastening nut by hand.
12. Carefully turn the saw blade in the direction of rotation: It must be exactly centred and may not “wobble”. Otherwise, you should check to make sure the flange is properly seated (step 10).
13. Use the two spanners to tighten the fastening nut again.
14. Check and correct the distance between the saw blade and splitting wedge (see section “Mounting/adjusting the splitting wedge”).
15. Put the insert back in: First insert it on the side facing away from the saw blade in the groove and then fold it down. It must be flush with the table.
16. Insert the two screws **43** again and tighten them.

## Inserting/changing the batteries of the laser

The laser beam shows you exactly where the saw blade will cut next so that you can make very precise cuts.

You will need two type Micro/LR03 batteries to operate the laser (included in the product contents). Proceed as follows to insert or change them:

1. Loosen the wing nut **46** by turning it a few revolutions.
2. Push the protective hood **17** forward and carefully lift it up and off.  
You will now see the laser in front of you (see **fig. C**).
3. Set the laser switch **35** to position "0" (laser off).
4. Loosen the battery compartment screws **36** slightly and turn the retaining plates so that they no longer block the battery compartment cover **40**.
5. Open the battery compartment cover by folding it up and remove it.
6. If necessary, remove the old batteries. Please observe the notes in the chapter "Disposal".
7. Insert the new batteries. Make sure that the polarity is correct as specified in the battery compartment.
8. Put the battery compartment cover back in place and secure it with the retaining plates and battery compartment screws.
9. Carefully place the protective hood over the laser and on the splitting wedge so that the screw fits into the elongated hole on the rear end of the splitting wedge.
10. Push the protective hood back up to the stop point and do not tighten the wing nut **46** excessively – it must be possible to move the protective hood up and down.

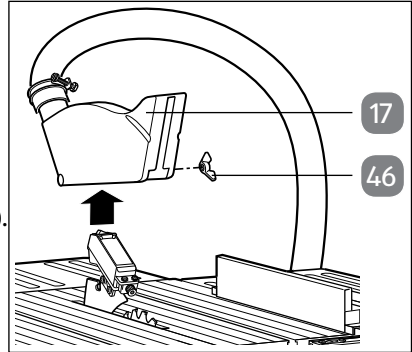

## Turning the saw on and off

### **⚠ WARNING!**

### Risk of injury.

- Before pushing the on switch, make sure the saw blade is correctly mounted and that mobile parts move freely.
- To switch the saw on, push the green power switch “I” **34**.  
The motor will start. Wait until the saw blade has reached the maximum speed before sawing.
- To switch the table saw back off, push the red power switch “0” **34**.  
**Caution:** The saw blade will continue to rotate for some time. Only leave the table saw unattended once the saw blade has come to a stop.

## Cutting depth

Use the handwheel **32** to set the saw blade to the desired cutting depth:

- Turn counterclockwise: Increase the cutting depth.
- Turn clockwise: Reduce the cutting depth.


## Setting the angle

1. Turn the front part of the adjusting and locking handle **31** approx. one rotation in a counterclockwise direction to loosen it.
2. With the back part of the adjusting and locking handle, set the desired angle on the scale.
3. Turn the front part until it is tight again.

## Parallel guide

### Stop height

The stop rail **14** of the parallel guide **13** has two guide surfaces of different height. Depending on the thickness of the materials to be cut, turn the stop rail into an upright position for thick material (workpiece thickness over 25 mm) and into a flat position for thin material (workpiece thickness under 25 mm).

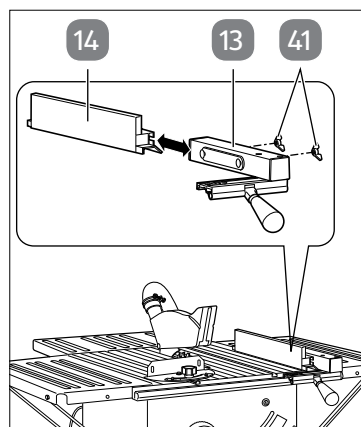

### AFTER SALES SUPPORT

To turn the stop rail:

1. Loosen the wing nuts **41** by turning them a few revolutions.
2. Pull the stop rail **14** off of the parallel guide **13**.
3. Turn the stop rail to the desired position.
4. Push the stop rail onto the parallel guide so that the metal plate glides into the profile of the stop rail.
5. Tighten the wing nuts again.

## Cutting width

When cutting pieces of wood lengthwise, use the parallel guide **13** that should be mounted on the right side of the saw blade to the extent possible.

A scale is located on the rail for the parallel guide, which shows the distance between the stop rail and saw blade, that is the cutting width.

### NOTICE!

This scale applies only when using the high stop rail (for thick material)!

- When using the low stop rail (for thin material), add 25 mm to the indicated dimension shown.

1. Lift the eccentric lever **30** slightly.
2. Push the parallel guide until the desired dimension is visible in the view window.
3. Push the eccentric lever down to lock it.

## Setting the stop length

To avoid clamping the material to be cut, the stop rail **14** can be moved lengthwise.

Rule of thumb: The back end of the stop runs into an imaginary line that roughly starts from the middle of the saw blade and runs to the back under 45°.


1. Set the required cutting width.
2. Loosen the wing nuts **41** by turning them a few revolutions.
3. Push the stop rail **14** until its back end touches the imaginary 45° line.
4. Tighten the wing nuts again.

## Adjusting the parallel guide

If the parallel guide **13** is not in line with the saw blade, you can correct the setting. You will need a long 4 mm Allen wrench for this work.

1. Set the saw blade to the maximum cutting depth.
2. Set the stop height of the parallel guide for thick material (upright).
3. Push the parallel guide to "0" so that the stop rail touches the saw blade.


4. Use an Allen wrench to loosen the screws **47** slightly and align the parallel guide and the stop rail parallel to the saw blade.

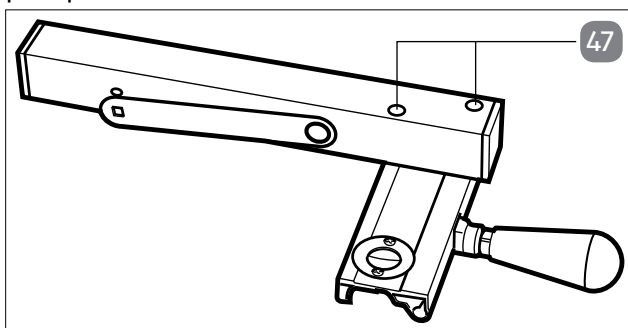

5. Tighten the screws **47** again.

## Adjusting the scale on the saw table


1. Check that the parallel guide **13** is in line with the saw blade and, if necessary, correct the setting (see section "Adjusting the parallel guide").
2. Set the stop height of the parallel guide for thick material (upright).
3. Push the parallel guide to "0" so that the stop rail touches the saw blade.
4. Loosen the screw **48** by turning it approx. 2 revolutions.

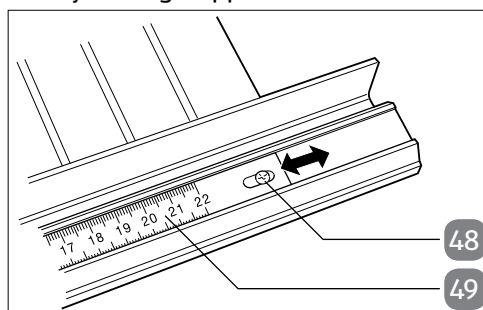

5. Move the scale **49** so that the line in the view window of the parallel guide **13** corresponds to the scale's zero line.
6. Tighten the screw **48** again.


## Cross guide

1. Push the cross guide **19** into a groove **50** on the saw table.
2. Loosen the knurled screw **51** and turn the cross guide until the arrow is pointing to the desired angle.
3. Tighten the knurled screw again.

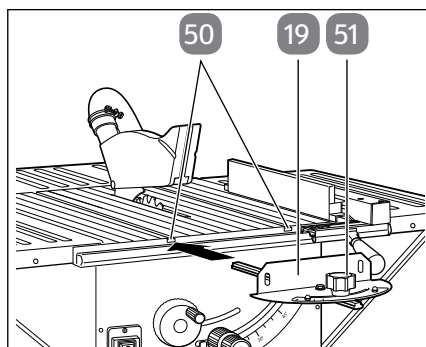

When cutting larger workpiece parts to size, you can extend the cross guide 19 with the stop rail 14 from the parallel guide 13:

1. Screw the wing nuts 41 including the washers off of the parallel guide 13.

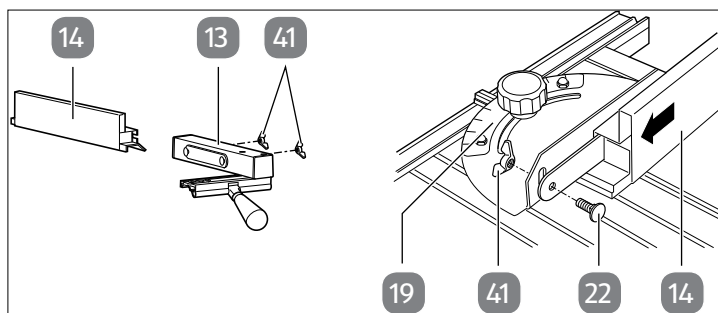

2. Pull the stop rail 14 off of the parallel guide 13 and also remove the long carriage bolts and the metal plate. Store the long carriage bolts in a safe place.
3. Screw the metal plate with two carriage bolts 22 and the wing nuts 41 along with the washers loosely onto the cross guide.
4. Turn the stop rail 14 to the desired position: upright for thick material (workpiece thickness over 25 mm) and flat for thin material (workpiece thickness under 25 mm).
5. Push the stop rail onto the cross guide 19, so that the metal plate glides into the profile of the stop rail.
6. Turn the wing nuts 41 until tight again.

## NOTICE!


Do not push the stop rail 14 too far towards the saw blade. There should be approx. 2 cm of space between the stop rail and saw blade.



## Adjusting the scale on the cross guide

For this work, you will need an AF 7 spanner and a PH2 star-headed screwdriver.

1. Screw the stop rail **14** onto the cross guide **19** as previously described.
2. Place a 90° stop angle on the saw blade.
3. Loosen the knurled screw **51** of the cross guide.
4. Use the 90° angle bracket to align the stop rail exactly with the saw blade.
5. Tighten the knurled screw again.
6. Check whether the cross guide indicates exactly 0°. If this is not the case, adjust the scale as follows:
7. Loosen the two domed cap nuts **52** by turning them a few revolutions. If the screws are also turning, you can hold them in place from below with a star-headed screwdriver.
8. Set the scale to the correct position.
9. Tighten the two domed cap nuts again.

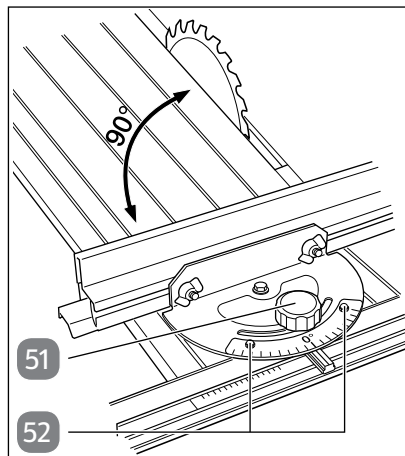

## The laser

You can use the laser to perform precision cuts with your circular saw.

The laser light is produced by a laser diode that is powered by two batteries (1.5 V AA/LR03). The laser light is widened into one line and is emitted through the laser light opening. You can use the line as an optical mark for the cutting line when performing a precision cut. Observe the laser safety notes.

- Switching the laser on: Set the laser switch **35** to “I”. The laser switch can be accessed through the opening on the top side if the protective hood is mounted. A red laser beam will now be emitted out of the laser light opening. Keeping the laser beam along the cutting line mark while sawing will ensure that your cuts are neat.
- Switching the laser off: Set the laser switch **35** to “0”. The laser beam will go out. To save the battery power, always switch the laser off when it is no longer needed.

Dust and chips that have accumulated may block the laser beam. You should therefore remove these particles from the protective hood after every use.

## Sawing

### NOTICE!

- Each time after making a new setting, perform a test cut to check the set dimensions.
- After switching on the saw, wait until the saw blade has reached its maximum speed before you perform the cut.
- Attention when cutting into the workpiece!
- Only operate the device with an extractor device.
- Check and clean the suction channels regularly.

### Performing lengthwise cuts

For this you cut through a workpiece lengthwise. Push an edge of the workpiece against the parallel guide **13** with the flat side on the saw table.

- When making lengthwise cuts, you must never be positioned in line with the cutting line.
  - Secure long workpieces so that they do not tip over at the end of the cut! Use e.g. a roller stand for this.
1. Adjust the parallel guide **13** to the workpiece height and the desired width (see section “Parallel guide”).
  2. Lower the protective hood **17** onto the saw table.  
The protective hood is pushed up by the workpiece while sawing.
  3. Switch on the dust collector first and then the saw.
  4. With your fingers closed, place your hands flat on the workpiece and push it along the parallel guide into the saw blade.
  5. Only guide it laterally to the front edge of the protective hood **17** with your left or right hand (depending on the position of the parallel guide).
  6. Always push the workpiece up to the end of the splitting wedge **18**.
  7. Switch the saw and the dust extractor off.
  8. Let the cutting waste rest on the saw table until the saw blade returns to the resting position.

**⚠ WARNING!****Risk of injury when cutting narrow workpieces!**

- Be absolutely sure to use the push stick when performing lengthwise cuts for workpieces with a width of under 120 mm. One push stick is included in the product contents. Promptly replace a worn or damaged push stick.
- When performing lengthwise cuts in very narrow workpieces with a width of under 30 mm, be absolutely sure to use a push stick and set the parallel guide to low.

The push stick is not included in the product contents! You can purchase one at a relevant supply store. Replace a push stick that is worn in due time.

**Performing bevel cuts**

In general, you should use the parallel guide **13** when performing bevel cuts.

1. Set the saw blade to the desired angle (see section “Setting the angle”).
2. Set the parallel guide corresponding to the width and height of the workpiece (see section “Parallel guide”).
3. Perform the cut corresponding to the width of the workpiece (see section “Performing lengthwise cuts”).

**Performing cross cuts**

1. Set the cross guide **19** as necessary (see section “Cross guide”). If the saw blade is also to be set at an angle, push the cross guide into the right groove that prevents your hand and the cross guide from coming into contact with the protective hood **17**.
2. Use the stop rail **14** if applicable.
3. Lower the protective hood **17** onto the saw table.  
The protective hood is pushed up by the workpiece while sawing.
4. Firmly push the workpiece against the cross guide.
5. Switch on the dust collector first and then the saw.
6. Push the cross guide and the workpiece towards the saw blade to perform the cut.

**⚠ WARNING!****Risk of injury!**

- Always take hold of the guided workpiece and never of the unguided workpiece that is being cut off.
  - Always push the cross guide forward until the workpiece has been cut through completely.
7. Switch the saw and the dust extractor off.
  8. Let the cutting waste rest on the saw table until the saw blade returns to the resting position.

**Cutting particleboards**

To prevent raw edges when cutting particleboards, do not set the saw blade higher than 5 mm above the workpiece thickness.

**Cleaning****⚠ WARNING!****Burn hazard!**

The saw blade will become hot during operation!

- Always let the saw blade cool off completely before cleaning!

**Risk of injury!**

- Disconnect the mains plug before any kind of cleaning.

**NOTICE!****Risk of short circuit!**

Water that has penetrated the housing may cause a short circuit.

- Do not wash the table saw and also do not spray it off with a water jet.
- Make sure that no water penetrates the housing.

**NOTICE!****Risk of damage!**

Improper handling of the table saw may result in damage.

- Do not use any aggressive cleaners, sharp or metallic cleaning utensils such as knives, hard scrapers and the like. They could damage the surfaces.

Clean the table saw directly after each use.

Keep the protective devices as free of dust and dirt as possible.

- Rub the table saw off with a clean cloth or blow it off with low-pressure compressed air.
- Use a damp cloth and a small amount of soft soap if it is heavily soiled.

**Troubleshooting****⚠ WARNING!****Risk of injury!**

- Disconnect the mains plug before troubleshooting.

Problem	Possible causes	Solutions, tips
The motor is not running.	No power.	Use a lamp to check if there is power to the socket.
	The house fuse or fault current protection switch has triggered.	Check the mains cord and, if applicable, the extension cord for damage.
	The motor overload protection has triggered because the motor is overloaded or overheated.	Let the table saw cool off for at least 15 – 20 minutes.
Insufficient cutting power, the saw does not run smoothly, large amount of dust produced.	Saw blade is dull or defective.	Replace the saw blade.
Motor produces a large amount of sparks.	Carbon brushes defective.	Have the table saw checked by a qualified workshop.

**AFTER SALES SUPPORT**

# Technical data

Model:	WZTS 1702
Supply voltage:	230 – 240 V, ~ 50 Hz
Output:	S6 40 % 1700 W
Idle speed $n_0$ :	6500 min <sup>-1</sup>
Hard metal saw blade:	Ø 250 x Ø 30 x 2.4 mm 24 teeth
Max. cutting depth:	72 mm / 90° 54 mm / 45°
Height adjustment:	continuously 0 to 72 mm
Saw blade pivotable:	continuously 0° – 45°
Extractor connection:	Ø 36 mm
Net weight:	approx. 24.5 kg
Sound pressure level $L_{pA}$ :	93.32 dB(A)
Uncertainty $K_{pA}$ :	3 dB
Sound power level $L_{WA}$ :	106.32 dB(A)
Uncertainty $K_{WA}$ :	3 dB
Dimensions:	
Working height:	895 mm
Table size:	610 x 445 mm
Table width extension:	608 x 250 mm
Table length extension:	435 x 320 mm
Article number:	92534

## S6 type of operation: Continuous operation

To prevent the motor from heating up to an impermissible extent, the table saw may only be used as follows:

After being operated for a period of 4 minutes (S 6 = 40 %) under a normal permissible load, the circular saw must be left in idle operation for 6 minutes.

**Caution:****Noise emission values**

The noise emission values were determined in accordance with EN 61029-2-1.

Wear ear protection.

Noise may cause hearing loss.

The specified values are emission values and therefore do not necessarily represent safe work place values. Although there is a correlation between the emission and immission levels; they can not be used as a basis for determining with certainty whether additional precautionary measures are necessary or not. Factors that may affect the current immission level present at the workstation include

the duration of influential aspects, the unique characteristics of the work room, other sources of noise etc., e.g. the number of machines and other adjacent processes. The permissible work station values may also vary from country to country. However, this information should make it possible for the user to better assess the danger and risk.

Keep the production of noise and vibrations to a minimum!

- Only use properly functioning devices.
- Regularly maintain and clean the table saw.
- Make sure your method of work suits the table saw.
- Do not overload the table saw.
- If necessary, have the table saw checked.
- Switch the table saw off if it is not being used.

# Ordering spare parts

The following data should be provided when ordering spare parts:

- Device type: WZTS 1702
- Article number of the device: 43.405.82
- Device ID number: 11015
- Spare part number of the required spare part (see table)

You can find current prices and information at [www.isc-gmbh.info](http://www.isc-gmbh.info).

## Spare part list

Item	Description	Spare part number
017	Protective hood	434059001001
021	Push stick	434059001002
044	Insert	434059001004
013	Complete parallel guide	434059001005
032	Handwheel	434059001006
031	Locking handle	434059001007
	Complete underframe	434059001008
034	Power switch	434059001009
016	Suction hose	434059001010
019	Cross guide	434059001011
	Suction adapter	434059001012
003	Extension table	434059001013
014	Width extension table	434059001014
	Saw blade flange	434059001015
	Table scale	434059001016
	Laser	434059001017
	Driving belt	434059001018
	Saw blade (24 teeth)	434059001003
020	Saw blade (48 teeth)	434059001019
	Carbon brushes (pair)	434059001020
015	Waste bag	434058001822



# Declaration of conformity

**Einhell Germany AG · Wiesenweg 22 · D-94405 Landau/Isar**



## Konformitätserklärung

**D** erklärt folgende Konformität gemäß EU-Richtlinie und Normen für Artikel

**GB** explains the following conformity according to EU directives and norms for the following product

**F** déclare la conformité suivante selon la directive CE et les normes concernant l'article

**I** dichiara la seguente conformità secondo la direttiva UE e le norme per l'articolo

**NL** verklaart de volgende overeenstemming conform EU richtlijn en normen voor het product

**E** declara la siguiente conformidad a tenor de la directiva y normas de la UE para el artículo

**P** declara a seguinte conformidade, de acordo com a directiva CE e normas para o artigo

**DK** attesterer følgende overensstemmelse i medfør af EU-direktiv samt standarder for artikel

**S** förklarar följande överensstämmelse enl. EU-direktiv och standarder för artikeln

**FIN** vakuuttaa, että tuote täyttää EU-direktiivin ja standardien vaatimukset

**EE** tõendab toote vastavust EL direktiivile ja standarditele

**CZ** vydává následující prohlášení o shodě podle směrnice EU a norem pro výrobek

**SLO** potrjuje sledečo skladnost s smernico EU in standardi za izdelek

**SK** vydáva nasledujúce prehlásenie o zhode podľa smernice EU a noriem pre výrobok

**H** a cikkekhez az EU-irányvonal és Normák szerint a következő konformitást jelenti ki

**PL** deklaruje zgodność wymienionego poniżej artykułu z następującymi normami na podstawie dyrektywy WE.

**BG** декларира съответното съответствие съгласно Директива на ЕС и норми за артикул

**LV** paskaidro šādu atbilstību ES direktīvai un standartiem

**LT** apibūdina šį atitikimą EU reikalavimams ir prekybos normoms

**RO** declară următoarea conformitate conform directivei UE și normelor pentru articolul

**GR** δηλώνει την ακόλουθη συμμόρφωση σύμφωνα με την Οδηγία ΕΚ και τα πρότυπα για το προϊόν

**HR** potvrđuje sljedeću usklađenost prema smjernicama EU i normama za artikl

**BIH** potvrđuje sljedeću usklađenost prema smjernicama EU i normama za artikl

**RS** potvrđuje sledeću usklađenost prema smernicama EZ i normama za artikal

**RUS** следующим удостоверяется, что следующие продукты соответствуют директивам и нормам ЕС

**UKR** проголошує про зазначену нижче відповідність виробу директивам та стандартам ЄС на виріб

**MK** ja izjavува следната сообразност согласно ЕУ-директивата и нормите за артикли

**TR** Ürünü ile ilgili AB direktifleri ve normları gereğince aşağıda açıklanan uygunsuluğu belirtir

**N** erklærer følgende samsvar i henhold til EU-direktivet og standarder for artikkel

**IS** Lýsir uppfyllingu EU-reglna og annarra staðla vöru

### Table Saw WZTS 1702 (Workzone)

☐ 87/404/EC\_2009/105/EC

☐ 2005/32/EC\_2009/125/EC

☐ 2006/95/EC

☐ 2006/28/EC

☒ 2004/108/EC

☐ 2004/22/EC

☐ 1999/5/EC

☐ 97/23/EC

☐ 90/396/EC\_2009/142/EC

☐ 89/686/EC\_96/58/EC

☒ 2011/65/EC

☒ 2006/42/EC

☒ Annex IV

Notified Body: TÜV Rheinland LGA Product Safety GmbH

Notified Body No.: 0197

Reg. No.: BM 50307655 0001

☐ 2000/14/EC\_2005/88/EC

☐ Annex V

☐ Annex VI

Noise: measured  $L_{WA}$  = dB (A); guaranteed  $L_{WA}$  = dB (A)

P = KW; L/Ø = cm

Notified Body:

☐ 2004/26/EC

Emission No.:

**Standard references: EN 61029-1; EN 61029-2-1;**

**EN 55014-1; EN 55014-2; EN 61000-3-2; EN 61000-3-3; EN 60825-1**

Landau/Isar, den 14.04.2015

Weichselgartner/General-Manager

Schunk/Product-Management

First CE: 15

Art.-No.: 43.405.82 I.-No.: 11015

Subject to change without notice

Archive-File/Record: NAPR012037

Documents registrar: Siegfried Roider  
Wiesenweg 22, D-94405 Landau/Isar

# Disposal

 
## Disposing of the packaging



Dispose of the packaging separated into single type materials. Dispose of cardboard and carton as waste paper and foils via the recyclable material collection service.

## Disposing of old devices

(Applicable in the European Union and other European states with systems for the separate collection of reusable waste materials)



### Old devices must not be disposed of with household waste!

If at some point it is no longer possible to use the table saw, each consumer is required by law **to dispose of old devices separately from their household waste**, e.g. at a collection point in their community/ borough. This ensures that old devices are recycled in a professional manner and also rules out negative consequences for the environment. For this reason, electrical devices are marked with the above symbol.



### Batteries and rechargeable batteries may not be disposed of with household waste!

As a consumer, you are required by law to turn in all batteries and rechargeable batteries, regardless whether they contain harmful substances\* or not, at a collection point in your community/ borough or in a retail outlet so that they can be disposed of in an environmentally-friendly manner.

\* labelled with: Cd = cadmium, Hg = mercury, Pb = lead

**WORKZONE®****WARRANTY CARD****TABLE SAW WZTS 1702**

Your details:

Name \_\_\_\_\_

Address \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_


☎ \_\_\_\_\_ E-mail \_\_\_\_\_

Date of purchase\* \_\_\_\_\_

\* We recommend you keep the receipt with this warranty card.

Location of purchase \_\_\_\_\_

Description of malfunction:

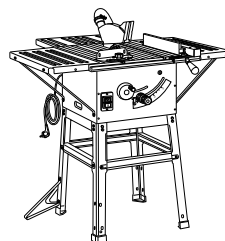

If after contacting the manufacturer you are requested to return the faulty product please return the completed warranty card together with it.

Einhell UK Ltd.

Unit 9

Stadium Court

Wirral International Business Park

Plantation Road

Bromborough

Wirral, CH62 3QG

UK

**AFTER SALES SUPPORT**

GB 0044 151 649 1500

IRE 0044 1890 946 244



sales@einhell.co.uk

MODELL: WZTS 1702

PRODUCT CODE: 92534

10/2015

At the regular land line rate  
of your phone company.

**3**

YEARS WARRANTY



---

## Warranty conditions

Dear Customer,

The **ALDI warranty** offers you extensive benefits in addition to your statutory rights:

**Warranty period:** **3 years** from date of purchase.

**6 months** for wear parts and consumables under normal and proper conditions of use (e.g. rechargeable batteries).

**Costs:** Free repair/exchange.  
No transport costs.

<b>ADVICE:</b>	Please contact our service hotline by phone, e-mail or fax before sending in the device. This allows us to provide support in the event of possible operator errors.
----------------	--

### In order to make a claim under the warranty, please send us:

- the faulty item together with the original purchase receipt and the completed warranty card.
- the faulty product with all components included in the packaging.

---

### The warranty does not cover damage caused by:

- **Accident** or **unanticipated events** (e.g. lightning, water, fire).
- **Improper use** or **transport**.
- **Disregard of the safety** and **maintenance instructions**.
- Other **improper treatment** or **modification**.

After the expiry of the warranty period, you still have the possibility to have your product repaired at your own expense. If the repair or the estimate of costs is not free of charge you will be informed accordingly in advance.

This warranty does not affect your statutory rights. In the event that a product is received for repair, neither the service company nor the seller will assume any liability for data or settings possibly stored on the product by the customer.

---



**Spend a little** Live a lot

Great care has gone into the manufacture of this product and it should therefore provide you with years of good service when used properly. In the event of product failure within its intended use over the course of the first 3 years after date of purchase, we will remedy the problem as quickly as possible once it has been brought to our attention. In the unlikely event of such an occurrence, or if you require any information about the product, please contact us via our helpline support services, details of which are to be found both in this manual and on the product itself.



**PRODUCED IN CHINA FOR:**

ALDI STORES LTD. PO BOX 26, ATHERSTONE  
WARWICKSHIRE, CV9 2SH

ALDI STORES (IRELAND) LTD.  
PO BOX 726, NAAS, CO. KILDARE.  
visit us at [www.aldi.com](http://www.aldi.com)

**AFTER SALES SUPPORT**



GB

0044 151 649 1500

IRE

0044 1890 946 244



[sales@einhell.co.uk](mailto:sales@einhell.co.uk)

MODEL: **WZTS 1702**

PRODUCT CODE: **92534**

10/2015

**3**

**YEARS  
WARRANTY**